

Diamond drill for tile


# **AQUASHOT**

# How to replace the shank and the water tank

Thank you for your purchase of our product. Carefully read this manual before use and utilize the product correctly and safely. After reading this manual, keep it in a safe place and read it as needed.


# Precaution for the replacement


Please do not re-disassemble after the replacement. Retaining stopper might becomes non-functional.

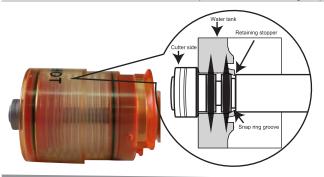

The retaining stopper fits to the groove of the shank and prevent the fall out of the water tank.

### Part names

 

 




[Retaining ring] (C type)

## Preparation before the disassembly



 [Shank]





Deflated water tank.

# MIYANAGA CO., LTD ISO 9001/ISO14001 Certified

Registered Office and Factory 2393 Fukui, Miki 673-0433, Japan Tel:+81(0)794-82-3648, Fax:+81(0)794-82-8462

MIYANAGA America Corp. 1010 W.Republic Dr.Unit 1.Addison.Illinois 60101, USA Tel:+1-630-359-5795 Fax:+1-630-359-5806

Website: http://www.miyanaga.co.jp

Representative Office - Europe Zettachring 12, 70567 Stuttgart, Germany Tel: +49(0)711-7280661, Fax: +49(0)711-7157077

#### How to disassemble



① Remove the retaining ring (C type) with a snap ring plier. \*Be careful not to let the spring pop out.



(3) Hold the water tank and strike the bottom of the shank to the ground. The water tank slides to the halfway. (till the part of the lever)



2 Remove the bellows and the spring.



4 Push out the water tank while holding the release lever in the unlocked position.

#### How to assemble

\*Please replace the O-ring of the shank if needed before the assembly.



1) Push in the water tank to the shank till the half way. (till the part of the lever) Continue pushing in the water tank while holding the release lever in the unlocked position.



3 Set the retaining ring (C type) with a snap ring plier.



(2) Insert the bellows and the spring after evacuating the air in the tank completely.

